


# Gazebo Assembly

## Step One: Unfold Bottom Frame

Unfold the Gazebo frame into a hexagonal shape, making sure that the snaps are facing out.

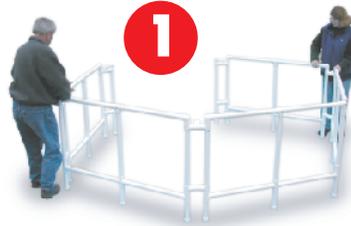

## Step Two: Build Dome

Remove the ribs and hub from their carrying bag and build the dome of the Gazebo.

Begin this by locking the top ribs (ribs with snap buttons) into the hub. Once all six top ribs are connected to the hub, lock the bottom ribs (belled ribs) into the top ribs.



## Step Three: Raise Dome

With two people, each holding two ribs on opposite sides, lift the dome over the bottom frame. Insert the slotted ends of the bottom ribs into the fittings on the hinged Gazebo corners.



## Step Four: Attach Skirt

Remove the vinyl skirt from its carrying bag. Stand the roll on end and make sure that the snaps are at the top. Begin by snapping the skirt to the four vertical snaps at one end of the bottom frame. Unroll the skirt around the frame, snapping it once at the center of each side and twice on the corner hinges.



## Step Five: Attach Canopy

With two people, each holding two corners on opposite sides of the canopy, toss it up over the top of the Gazebo, keeping hold of one corner. Snap those corners in place and pull down the other four corners and snap them into place.



## Step Six: Attach Counter Supports

Remove the counter support pieces from the counter carrying bags. Each counter support assembly consists of two legs and an upper and lower brace (and middle brace if your unit contains middle under-counter shelves).

Snap two counter legs onto the lower frame rails, on either side of a center post. Snap the lower counter brace between the legs. Then slide the upper brace over the top of the counter legs.



## Step Seven: Place Shelves & Counters

Lower under-counter shelves just lay into place atop the counter legs and lower brace.

Middle shelves require installing the middle shelf bracket by snapping it just over the screws on the counter legs and center post.

Position the counter on the upper brace and the rails of the Gazebo frame. It should overhang about 1/4 of an inch off the front of the Gazebo. The velcro will hold it in place.

